

RG



A solid red rectangular bar located to the left of the "Contents" text.

Contents

 
 


RG-EG680-P

EasyGate

EG

MIPS

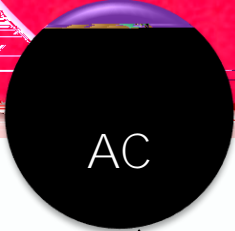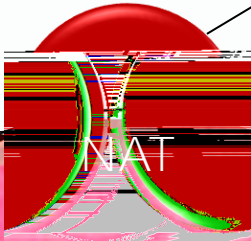

POE
80211.af/at
POE

45W

7 LAN

AC
AP

 


Contents



EG680-P

EG680-P

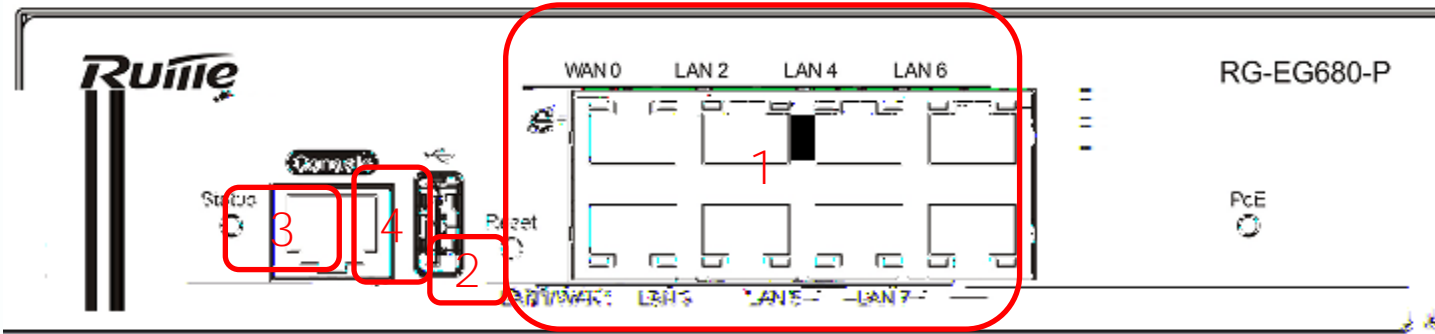

1	8	8GE	1-7	1	LAN/WAN
		1	WAN0	mgmt	10/100/1000M
			WAN1	WAN/LAN	
LAN	1	LAN2			10/100/1000M
		LAN1	WAN/LAN		
POE		45W	80211.af/at	7	LAN POE
2	reset		reset	3	
3	Console		RJ45		
4	USB	1	USB2.0	U	USB
	U	U		FAT32	
5.	512M				
6.		DDR3	512M	1	eMMC 4GB

 


	RG-EG680-P	RG-EG2000F	RG-EG2000K	RG-EG2000CE	RG-EG2000SE	RG-EG2000GE	RG-EG2000UE	RG-EG2000XE
CPU	MIPS	MIPS	MIPS	MIPS	MIPS	MIPS	MIPS	MIPS
	8	5	7 2	8 2	8 2	8 4	8 8 4	8 8 4
	N/A	N/A	N/A	N/A	N/A	N/A	2	2
	4G	4G	32G	500G 1	500G 1	500G 2	500G 2	500G 2
	512M	512M	1G	2G	2G	4G	16G	16G
	1U	1U						



Contents



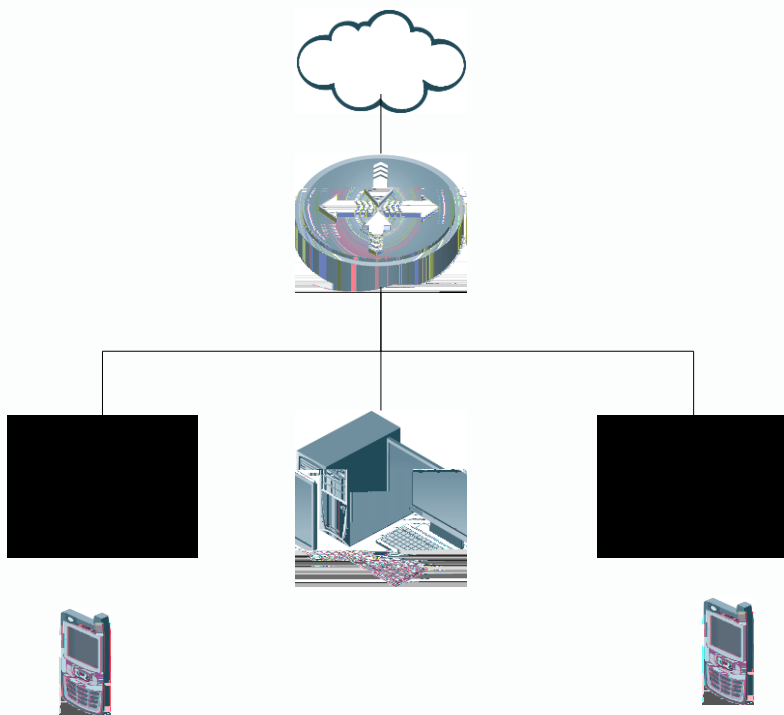

AC POE

AP AC AP AP
POE

EG680-P

A solid red rectangular block on the left side of the slide.

4008-111-000

“

“

“

“

webchat.ruijie.com.cn

support.ruijie.com.cn

www.ruijie.com.cn/service.aspx