

RG-S2910- 24GT4SFP-UP- H	24 10/100/1000M PoE/PoE+ 4 HPOE 4 1000M SFP	POE HPOE POE 1.XX 2.XX 90W 3.XX 60W
RG-PBOX-DC12	RJ45 POE DC12V	

HPOE
RG-PBOX-AC24

 
RG-S2910-24GT4SFP-UP-H
RG-PBOX-DC12
POE

POE








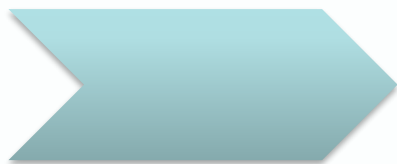



19

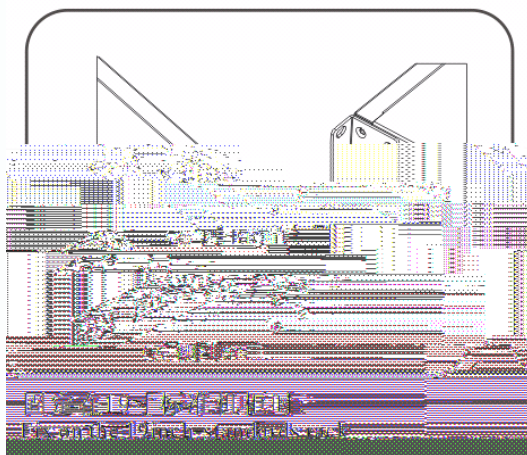 

I




  (
4

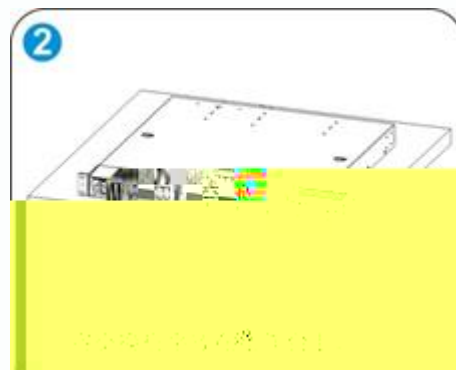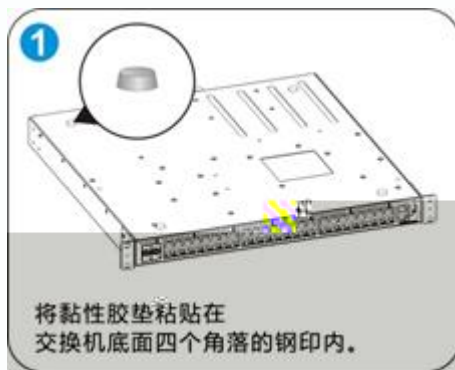



PBOX

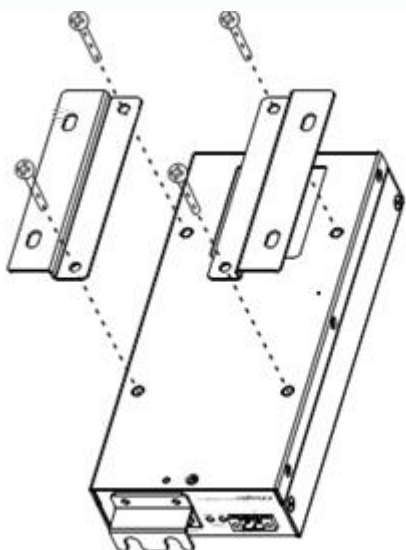 




PBOX

PBOX
PBOX

 M4*20mm

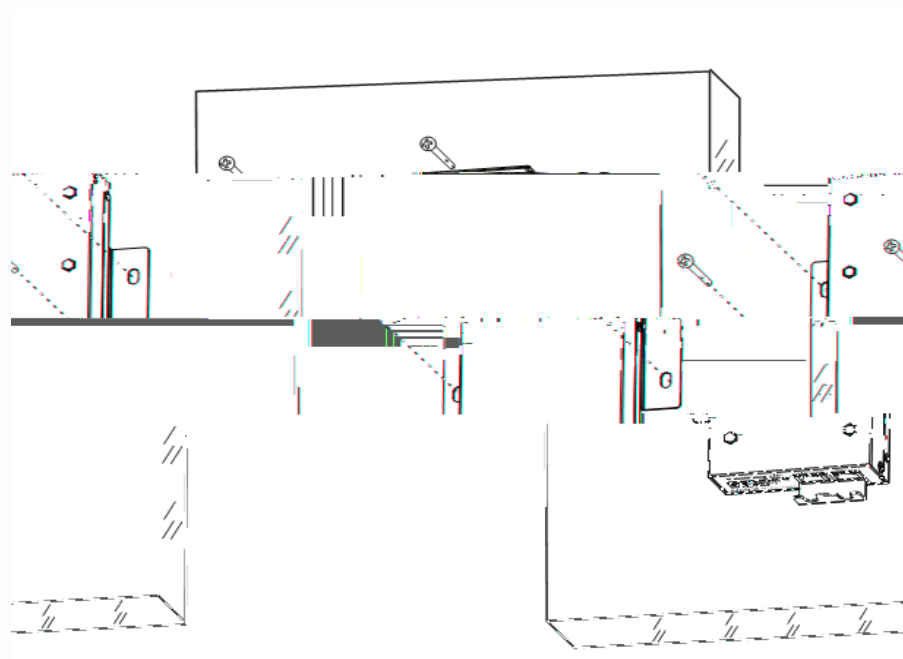



RG-PBOX

Data Out

PD

HPOE

1-4

Data&Power in

1m

18AWG

RG-

PBOX-DC12

CCD

C/CS



I

 


I



OT

OT

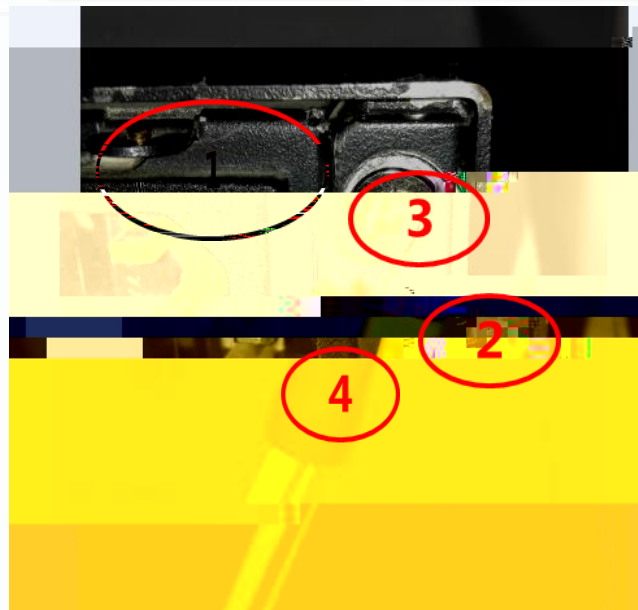


1	
2	
3	OT
4	

PE

PE

 
I

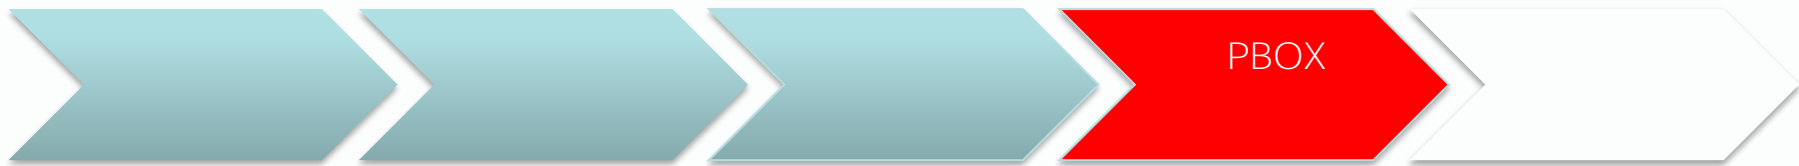

I



 20

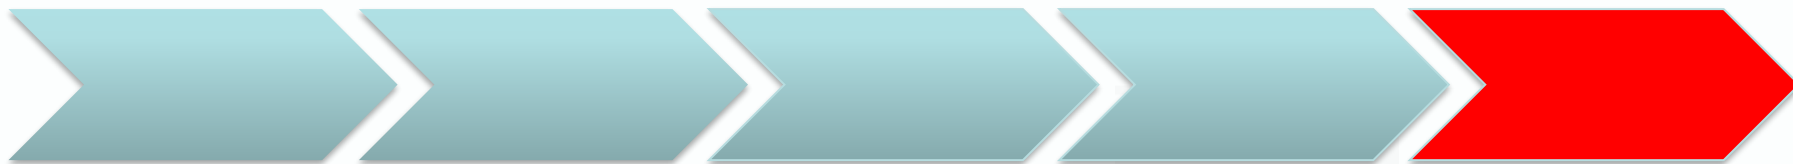

RG-PBOX

Data out

Data&Power in

HPOE

RG-PBOX-DC12

PBOX





1 Console

2 Telnet/SSH

CLI

3 SNMP

CLI

4 WEB

WEB

admin/admin

Riite

www.riite.com.cn

| Console




PC


1

2

| Console

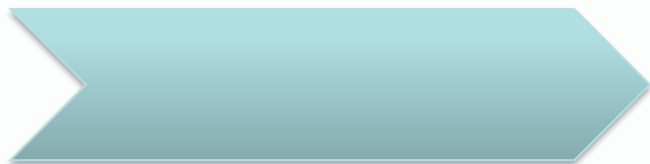 

| Console

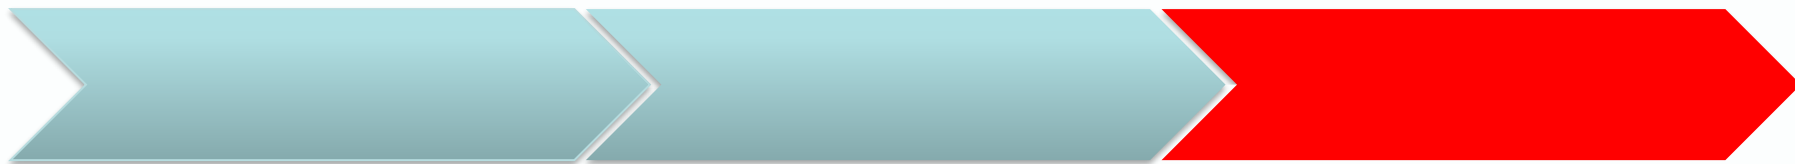 

CLI



Ruijie>enable



| Console



11.X CLI

10.X

CLI

```
Ruijie#show version /show version slots / show cpu /show memory /show interface status /show ip route /show arp /show fan / show power /show temperature....
```

```
Ruijie#show run //  
Ruijie(config-if-GigabitEthernet 1/1)#show this //
```

```
Ruijie#wr //
```

```
Ruijie#ping 8.8.8.8 // Ping
```



Telnet



Telnet









1	FTP		
2	TFTP		FTP
3	USB	USB	5

FTP



1 FTP Server USB0 S6010 FLASH

```
Ruijie(config)#ftp-server username admin
Ruijie(config)#ftp-server password ruijie
Ruijie(config)#ftp-server topdir tmp:/
Ruijie(config)#ftp-server timeout 300
Ruijie(config)#ftp-server enable
```

2 PC FTP Client FLASHFTP FTP PC
S6010

3 PC FTP FTP Server

4 Upgrade USB

FTP

USB

USB
Upgrade

FTP

FTP
U

www.ruijie.com.cn

www.ruijie.com.cn/service.aspx

support.ruijie.com.cn

webchat.ruijie.com.cn

4008-111-000