

# 7kuille 7kuille 7kuille



# 目录 Contents

1



2

 
3

 









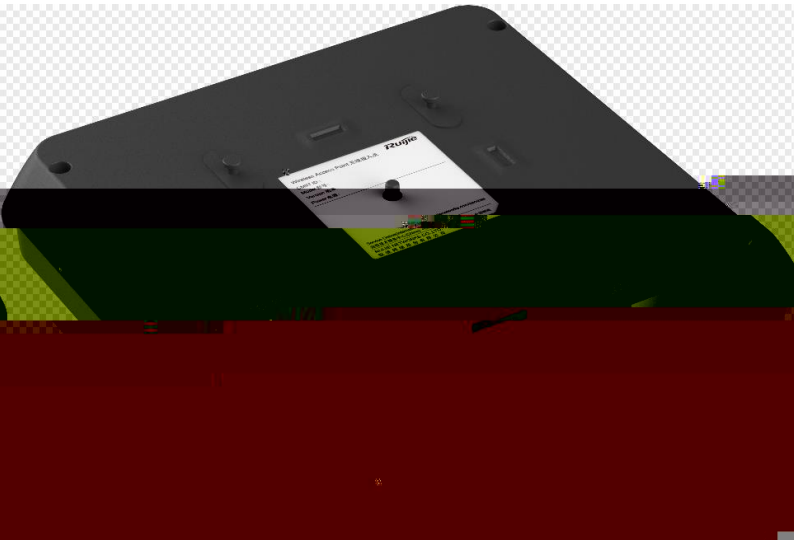



—	AP	/	
3Hz	AP	uboot	
—	AP		
3Hz	AP	Link down	
—	AP	CAPWAP	
3Hz	AP		
—	AP	CAPWAP	
3Hz	AP	CAPWAP	
3Hz 2 2	AP		

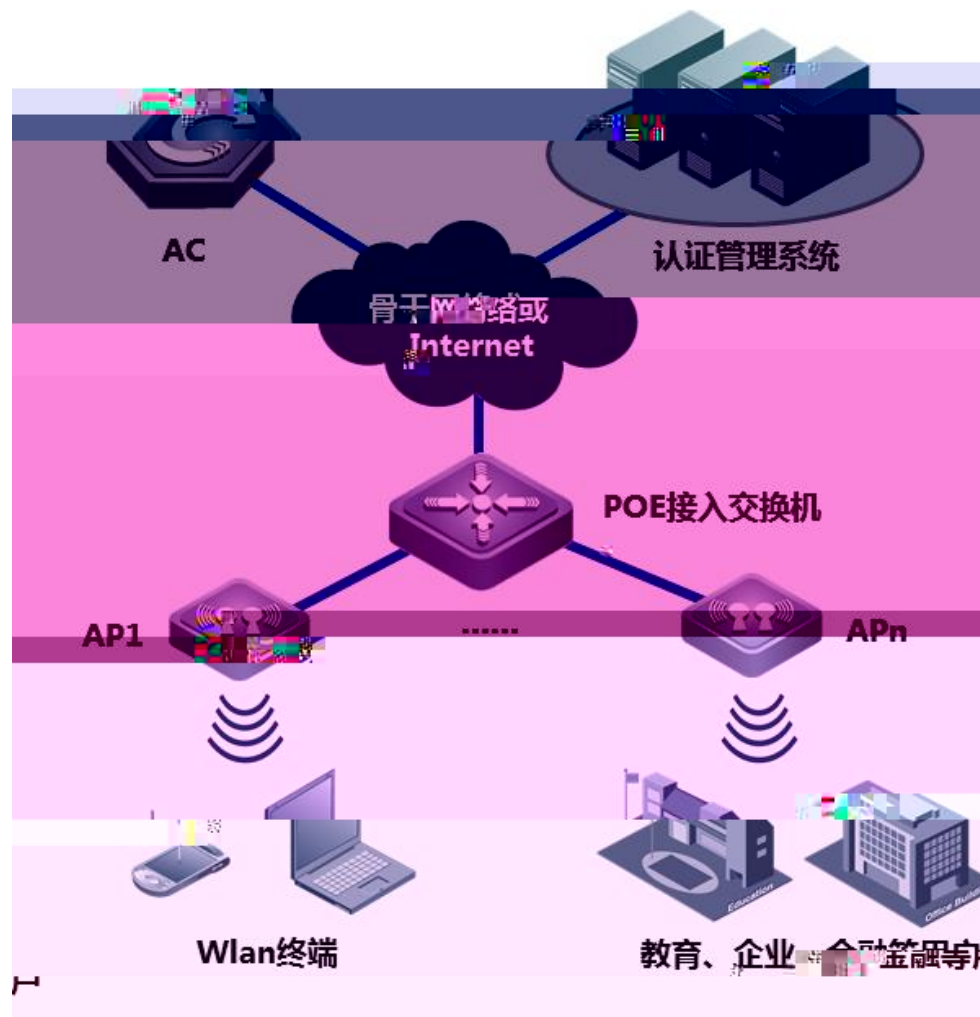 

# 目录 Contents

1



2

3







	11axsupport enable			
	no 11axsupport enable			
	no	11ax		
	Radio	11ax	11ax	STA
	dot11radio			

	long-gi { 0.8   1.6   3.2 }			
	no long-gi			
	no	11AX	0.8us	
	0.8	OFDM		0.8us
	1.6	OFDM		1.6us
	3.2	OFDM		3.2us
			0.8us	
	dot11radio			

	ofdma enable
	no ofdma enable
	no ofdma
	dot11radio

# 目录 Contents

1

网络基础

2

常用功能配置

3

日常维护和问题排查

```

WS18000-1B11#show ac-config client | in mu
===== show sta status =====
AP      : ap name/radio id
Status: speed/power/save/work mode/beamforming state/MU-MTMO
E - enable power save  D - disable power save
-----
AP number: 33
E AP number: 156
online
off/in

radio      Up/off time    State    AP Name      SSID      TR Address    Mac Address    Radio
-----
n_Mid_AP740-1  172.18.57.219  5869.6e84.b2cc  1 E 3 1L 80 2 E 0 157 100  9:16:53:19 run  19#LF_fangjia
              3 E 0 165* 100 4 N

```


第三频

```

WS18000-1B11#show ac-config client | in mu
===== show sta status =====
AP      : ap name/radio id
Status: speed/power/save/work mode/beamforming state/MU-MTMO
E - enable power save  D - disable power save
-----
TotalSta.Num: 39
STA MAC      IPV4 Address    AP      wlan wlan Status    Asso Auth    Net Auth    Up time
-----
F48b.32a3.04e3  temp/2        6      1731    9.0M/E/ac/R/mu  MAB          WEB          0:20:37:33
WS18000-1B11#


```

 mu终端

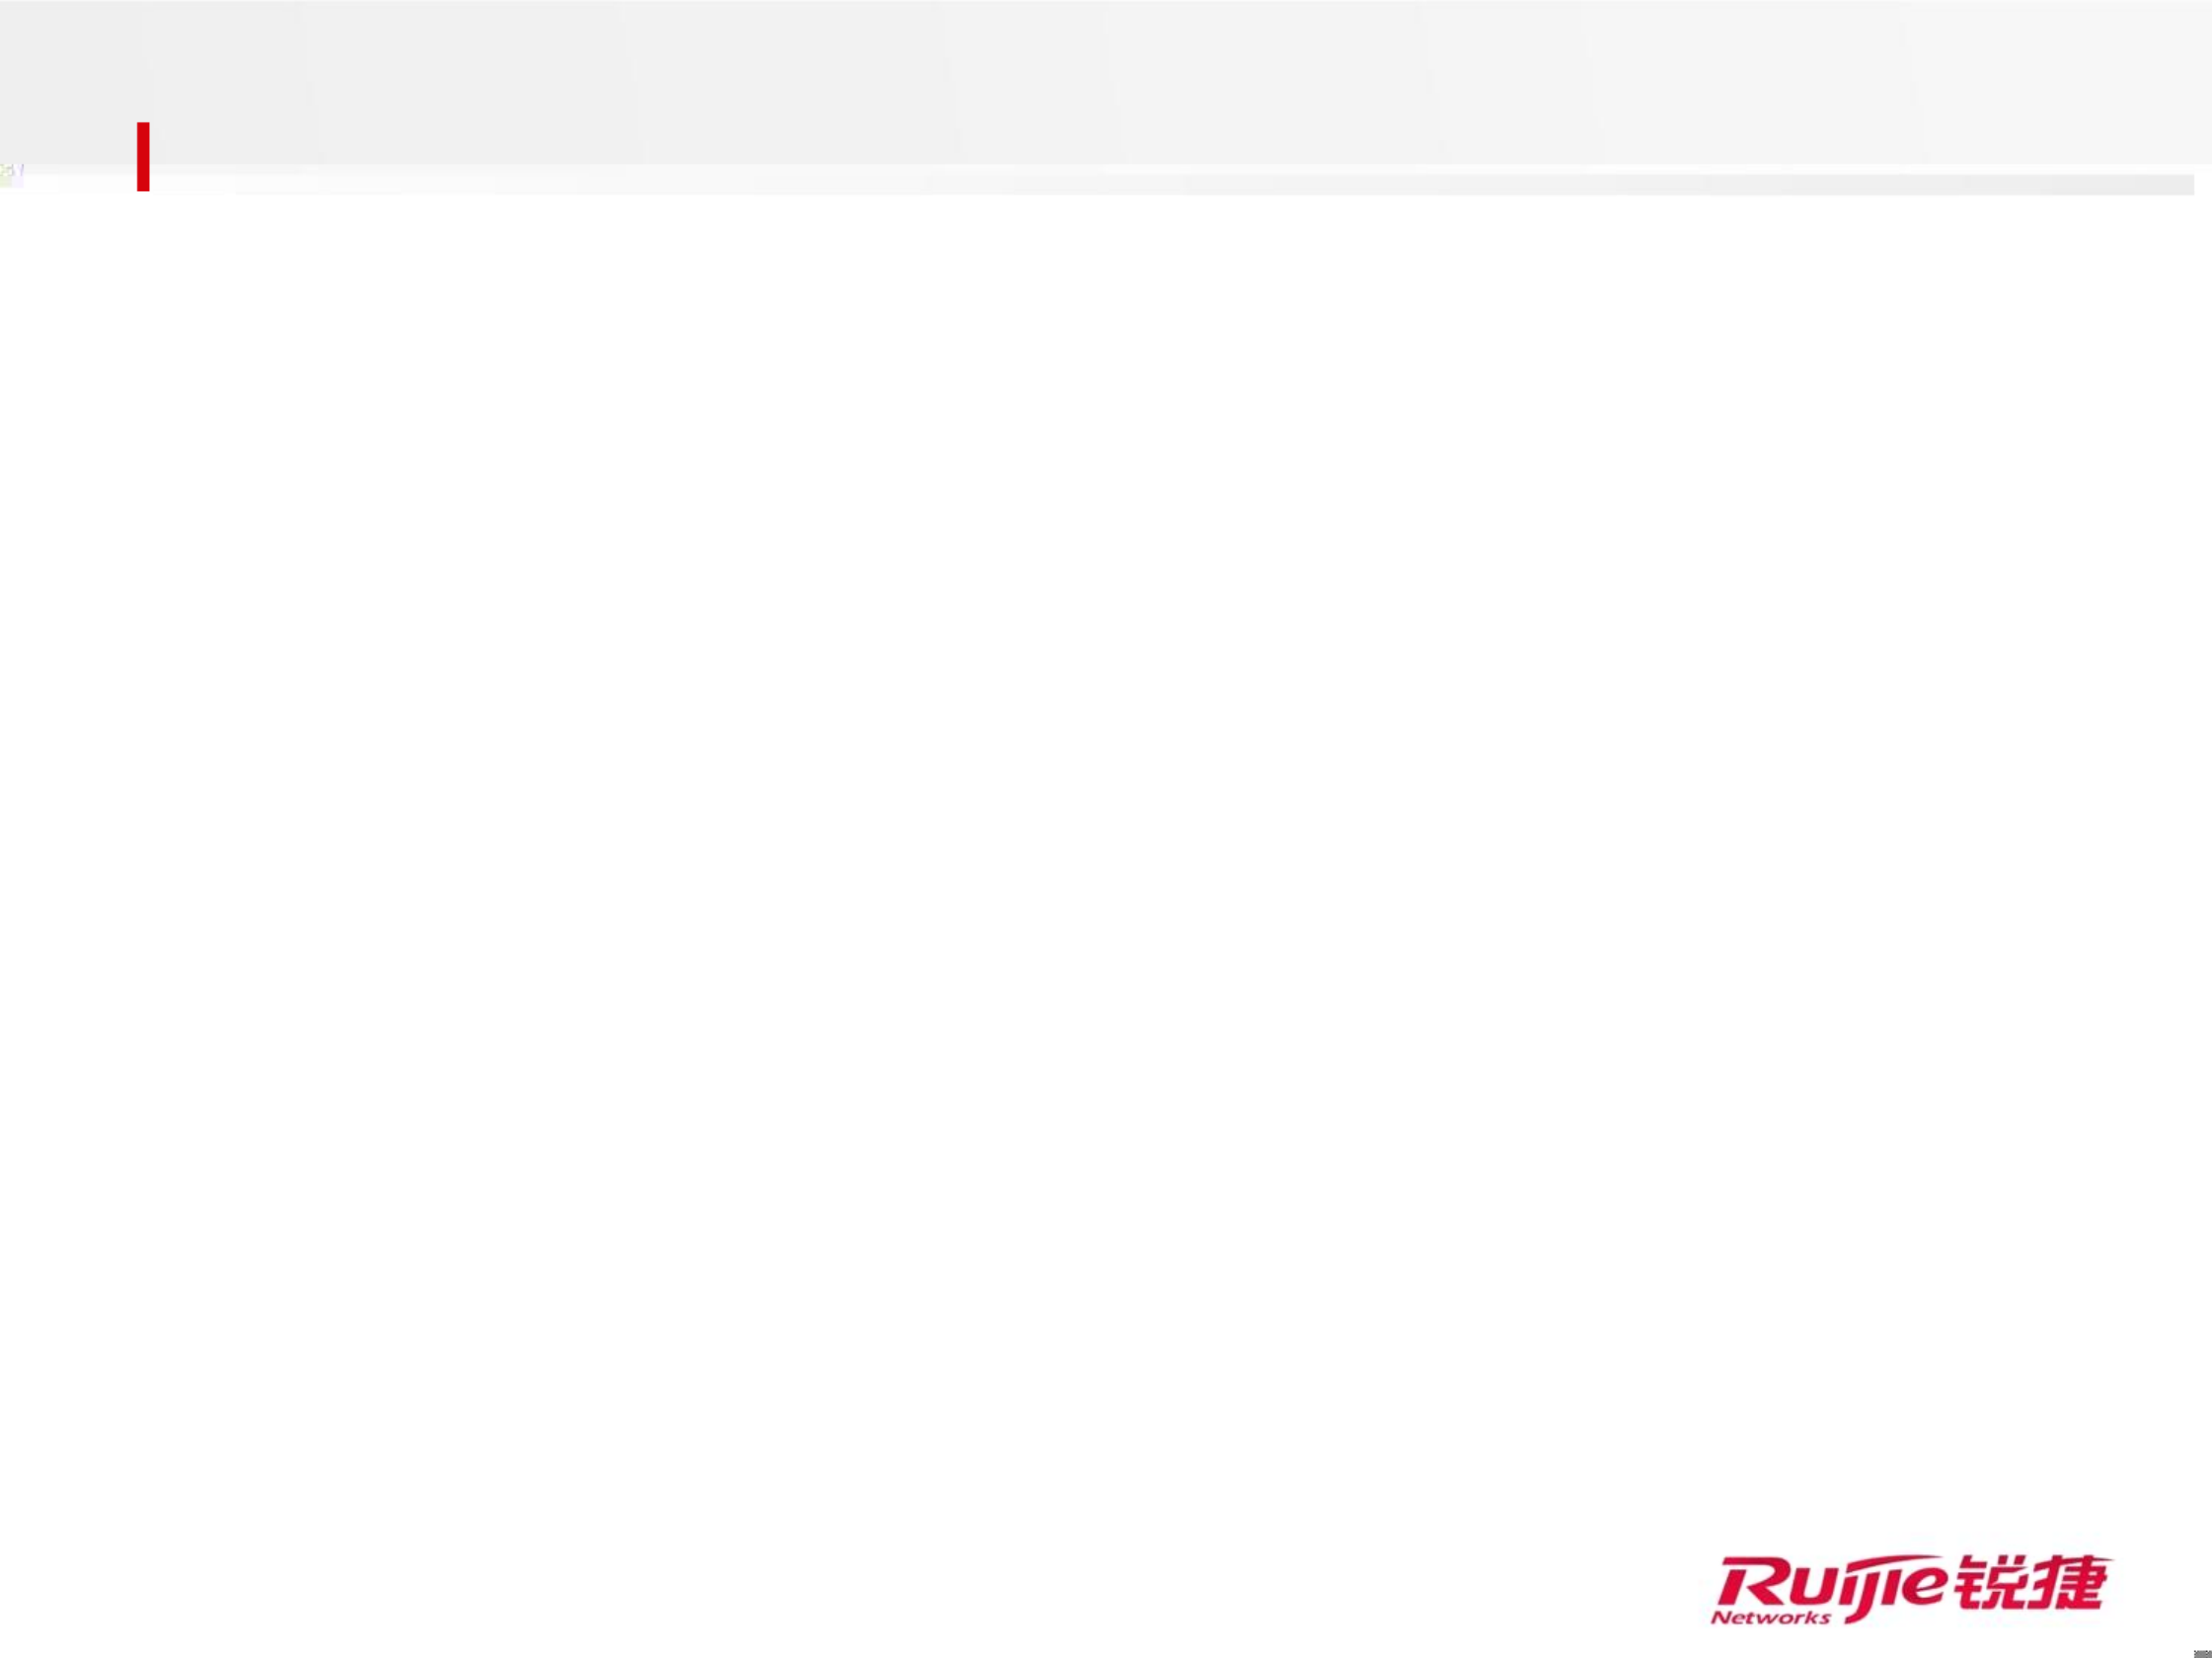

RG-AP820

 AP820-A(V3)

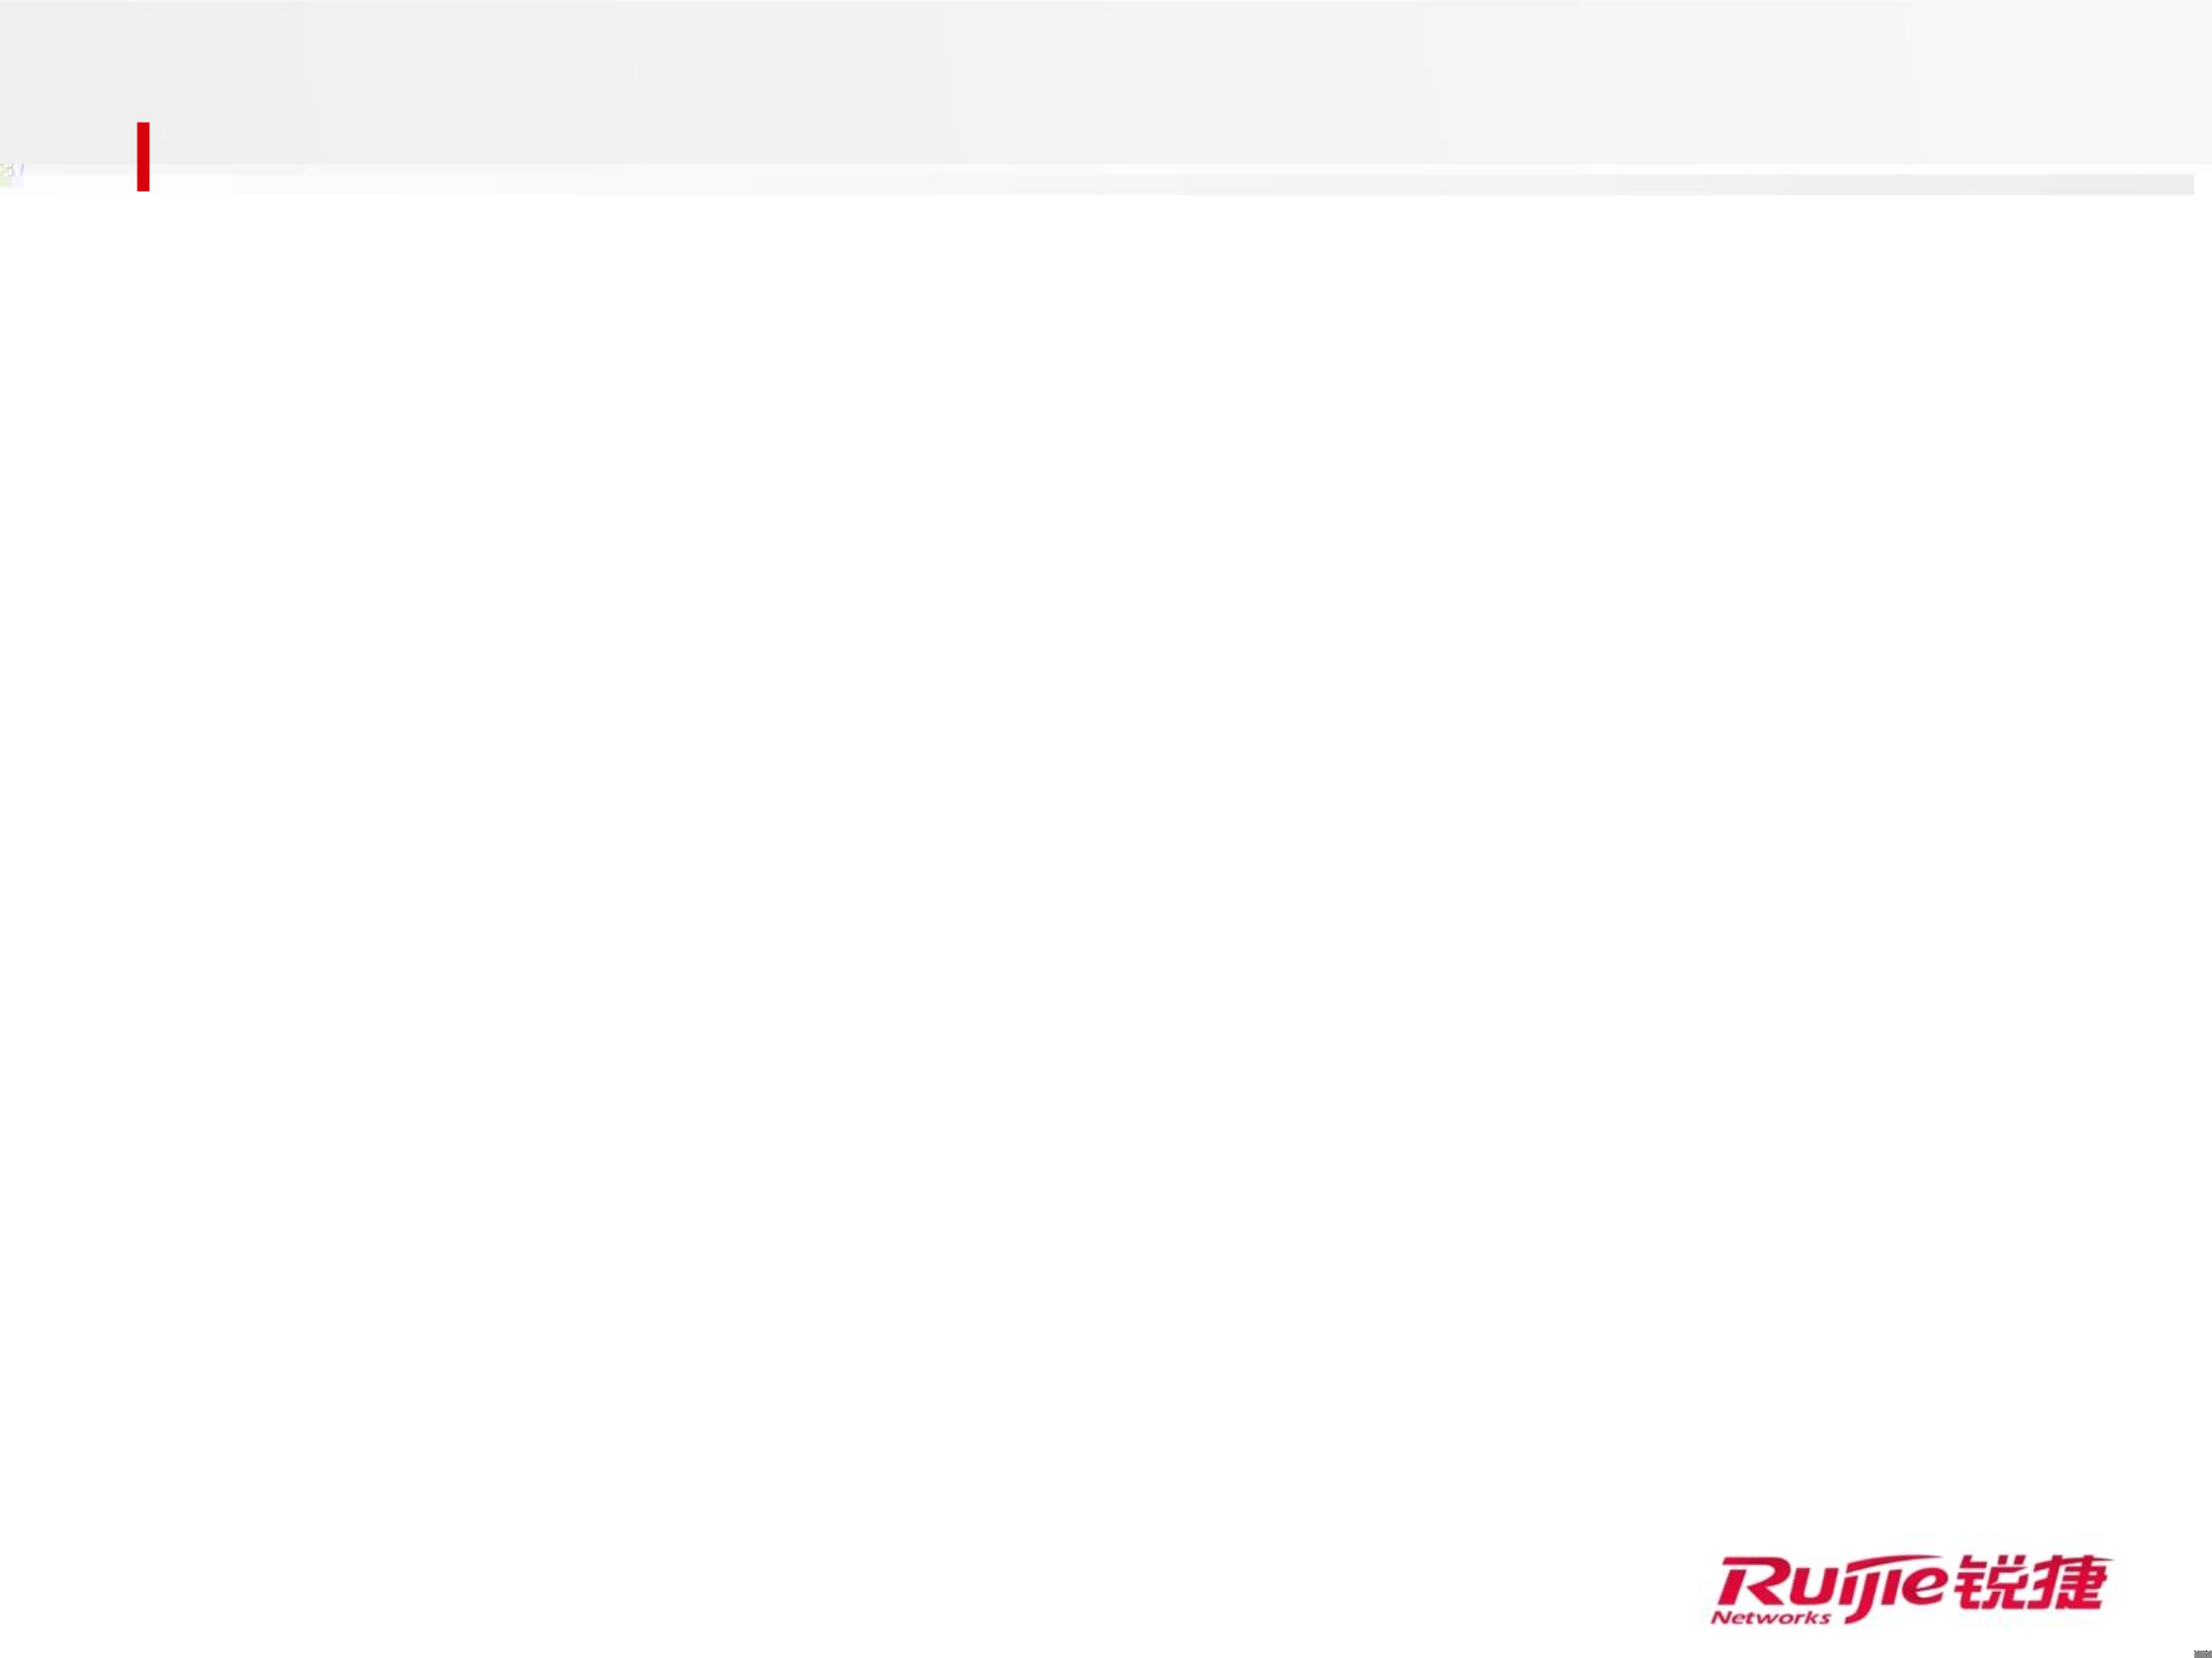

1001 1001